

Panic Door Hardware

Panic Bar :

MODEL

ADF5000-33SS
ADF5000-41SS




MODEL

ADF5600-33SS
ADF5600-41SS




Data and Features	ADF5000-33SS	ADF5000-41SS	ADF5600-33SS	ADF5600-41SS
Device Type	Rim Type Non-handed design		Rim type with vertical rod Non-handed design	
Lock point	1		2	
Length (L)	33"	41"	33"	41"
For door width	650 - 1320 mm.			
For door height	< 2130 mm.			
Max. door weight	200 kg.			
Max. door leaf thickness	50 mm.			
Extended handle spindle and bolts for door leaf thickness 50-105 mm.	(Optional)			
Material : Stainless Steel 304	Head Cover, Chassis, End Cap		Head Cover, Chassis, End Cap, Top/Bottom latch box	
Standard / Certificates	ANSI A156.3 Grade 1, UL 10C Fire rated			

All dimensions are in mm.

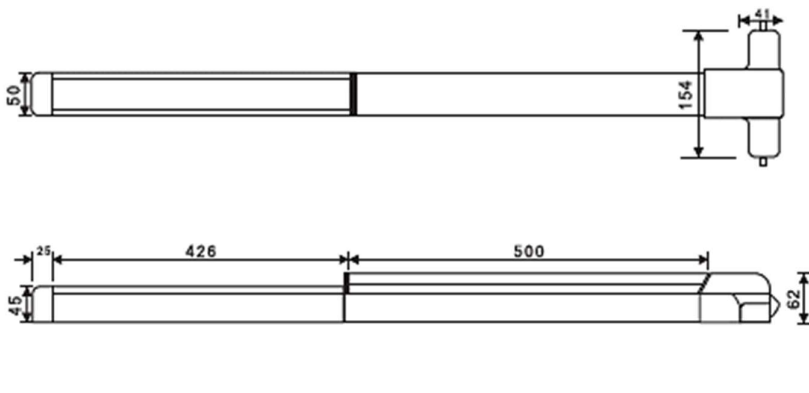


External Trim Hardware


ADT-001 : Trim plate with Cylinder hole (SS)

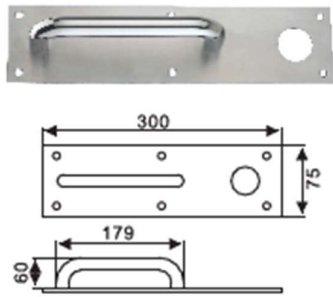


DT-0090 : Cylinder (SN)

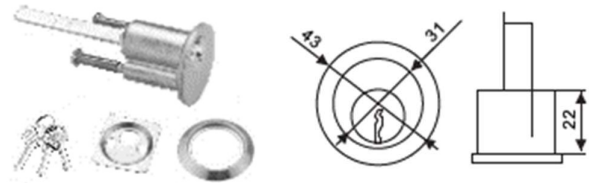


ADT-004 : N Pull (SS)

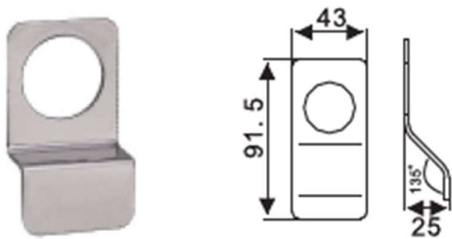


ADT-005 : Knob set (SS)

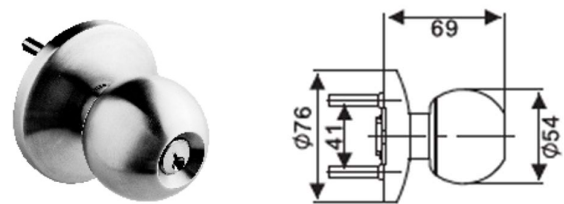

ADT-006 : Lever set (SS)

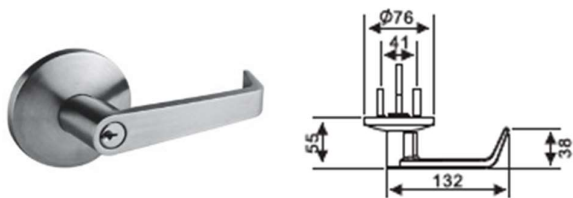

ADT-009 : Trim plate with Lever (SS)

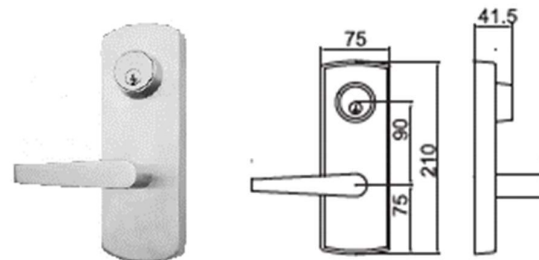


*** Please contact us for other designs




Installation Instructions

1 PARTS NAME


IF YOUR DOOR IS NARROWER THAN 36", REMOVE END COVER AND CUT SECTION "A" TO A DESIRED LENGTH.

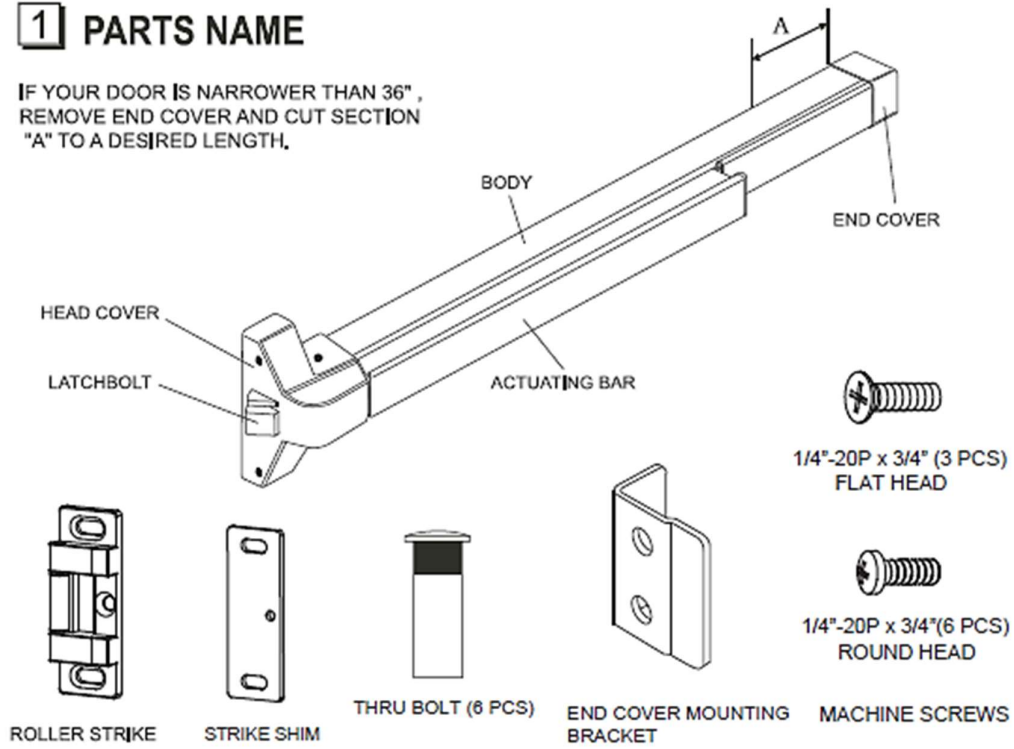

2 OPTIONAL PARTS

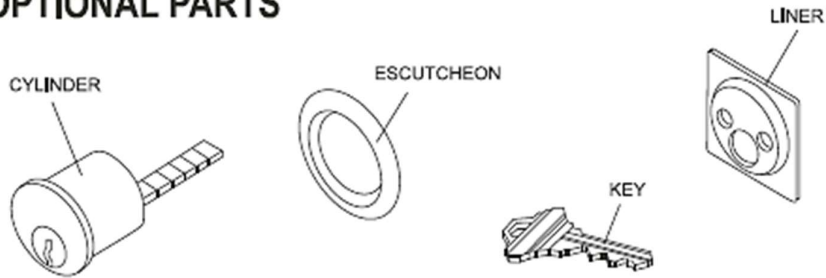


3 TYPE OF INSTALLATION

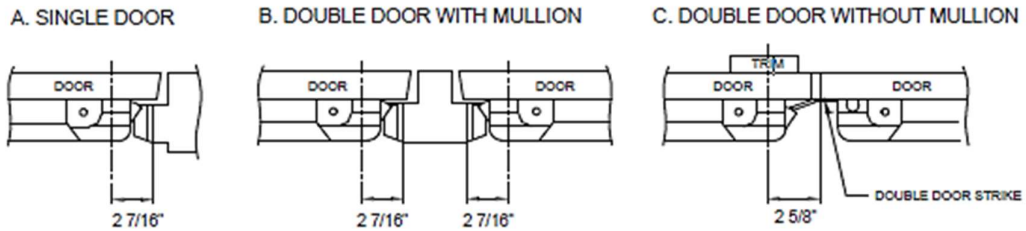


Installation Instructions

4 DRILL HOLES

1. USE TEMPLATE ENCLOSED TO MARK DOOR FACE AND DRILL HOLES IN ACCORDANCE WITH THE DIAMETERS SUGGESTED.
2. "B" LENGTH SHOULD BE MEASURED FROM THE CENTER OF CYLINDER HOLE TO THE END OF THE BODY.

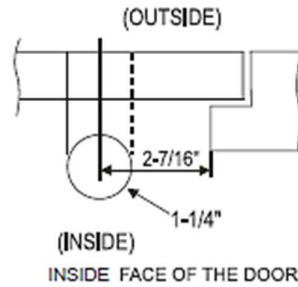



Drill $9/32$ " holes inside and $3/8$ " holes outside for the (6) thru bolts and drill & tap for (3) $1/4$ "x20 machine screws for the Roller Strike.

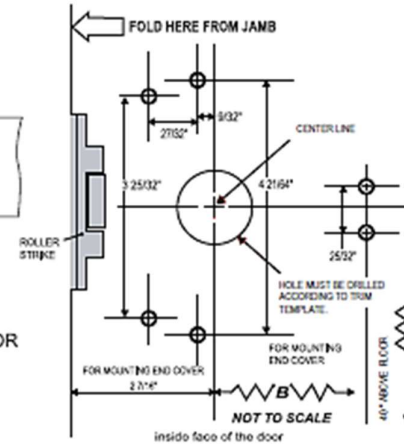

B: CENTER OF CYLINDER TO END OF BODY INSIDE FACE OF THE DOOR

5 INSTALL CYLINDER (IF REQUIRED)


1. INSERT THE CYLINDER INTO THE HOLE ON THE DOOR
2. KEEP THE TAILPIECE HORIZONTAL
3. TIGHTEN THE SCREWS

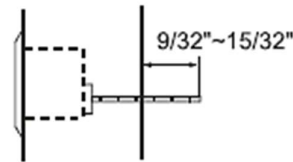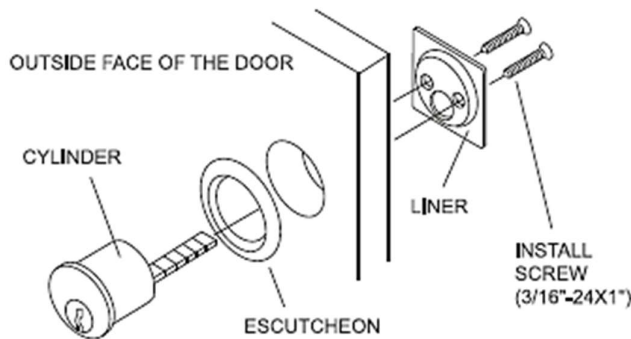

TAILPIECE PROJECTION

6 INSTALL BODY


1. REMOVE THE HEAD COVER AND END COVER.
2. ALIGN THE SCREW HOLES ON THE BODY WITH THE HOLES ON THE DOOR.
3. INSERT SCREW BOLT (6PCS) $3/8$ " FROM OUTSIDE OF THE DOOR THEN TIGHTEN THE $1/4$ " ROUND HEAD SCREW (6PCS) FROM INSIDE OF THE DOOR ON THE BODY AND THE MOUNTING PLATE OF END COVER.

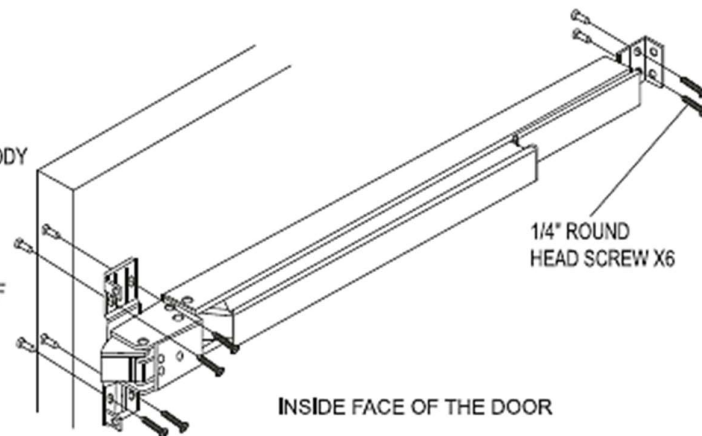

Installation Instructions

7 INSTALL HEAD COVER AND END COVER





1. PUT ON THE HEAD COVER AND END COVER
2. TIGHTEN THE SCREWS SECURELY ON THE HEAD COVER AND THE END COVER.

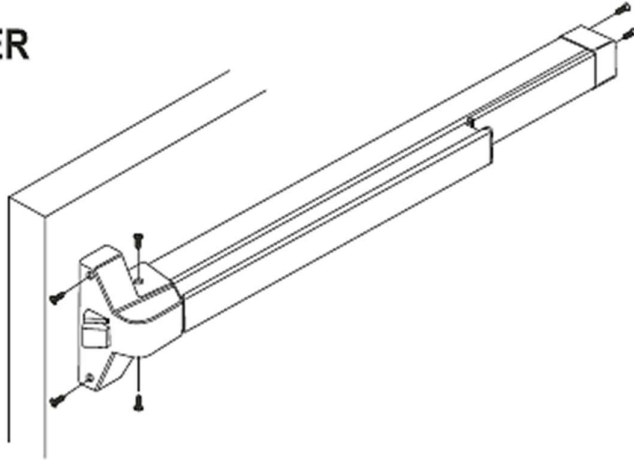

8 INSTALL ROLLER STRIKE

1. WITH THE DOOR IN THE CLOSED POSITION MARK THE CENTERLINE OF LATCHBOLT ON DOOR JAMB.
2. PLACE ROLLER STRIKE ON DOOR JAMB. ALIGN CENTER OF ROLLER STRIKE WITH THE LATCHBOLT CENTERLINE MARK ON THE JAMB. THEN ALIGN THE OUTSIDE EDGE OF THE ROLLER STRIKE WITH THE OUTSIDE EDGE OF THE DOOR JAMB.

3. MARK THE CENTER OF THE 2 ADJUSTABLE SLOTTED HOLES AND DRILL 7/32" PILOT HOLES. TAP PILOT HOLES WITH 1/4"-20 THREADS AND INSTALL MACHINE SCREWS. OR INSTALL SELF TAPPING MACHINE SCREWS OR WOOD SCREWS IN PILOT HOLES. CLOSE DOOR TO CHECK IF LATCHBOLT EXTENDS PROPERLY. ADJUST ROLLER STRIKE IF NECESSARY.
4. WITH ROLLER STRIKE IN FINAL POSITION, DRILL A 7/32" PILOT HOLE FOR THE CENTER MOUNTING HOLE. TAP PILOT HOLE WITH 1/4"-20 THREADS AND INSTALL MACHINE SCREW. OR INSTALL SELF TAPPING MACHINE SCREW OR WOOD SCREW IN PILOT HOLE.

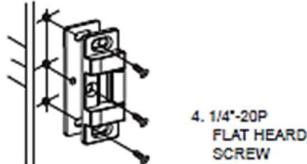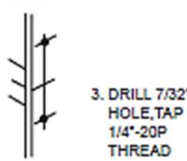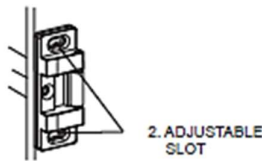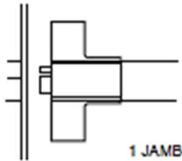

NOTE : INSTALL STRIKE SHIM UNLESS THE EXIT DEVICE HEAD COVER RUBS THE ROLLER STRIKE. THEN REMOVE THE STRIKE SHIM TO GAIN ADDITIONAL CLEARANCE.

9 OPERATION TEST

- PRESS DOWN THE ACTUATING BAR. OPEN AND CLOSE DOOR A FEW TIMES AFTER INSTALLATION COMPLETED

